

# Series S40

Panel meter 72x36mm size



**Model S40-A**

**for TrueRMS AC Voltages  
for TrueRMS AC Currents**

*Panel meter for TrueRMS measures of AC voltages and AC currents. Category of measure in CAT-III up to 300Vac and CAT-II up to 600Vac. Current measures up to 5Aac. Measure coupling selectable in AC or AC+DC. Instrument with reduced housing size with standard 14mm digit height. Included “measure” function (visualization of signal input without scaling), automatic signal correction, peak&hold, double setpoint alarms, brightness control, filters, ... Universal power options in AC and DC, signal retransmission and control options.*

# Meter S40-A

## Panel meter 72x36mm size for TrueRMS VAC and AAC

Panel meter for TrueRMS measure of AC voltages and AC currents. Category of measure in CAT-III up to 300Vac and CAT-II up to 600Vac. Currents up to 5Aac. Measure coupling selectable in "AC" or "AC+DC".

Provides "measure" function for temporary signal input visualization without scaling, automatic signal input correction to associate the actual input signal to the Display High value (span correction) or to the Display Low value (Offset correction), "peak & hold", double setpoint alarms ... and more.

Reduced size 72x36mm DIN standard instrument, maintains standard 14mm digit height, with full 4 digit resolution plus additional negative sign. Connections via plug-in screw terminals and configuration via three front push-buttons. For application on industrial environments.

Management for up to 4 alarms with 1 or 2 setpoints each, with hysteresis and delays. Functions available include memory of maximum and minimum, left zeros, steps on display, fixed digits, recursive display filter, password, brightness control, function "measure" for visualization of input signal without scaling, offset and signal high autocorrection and "peak&hold" function.

Power options in AC and DC with universal range power modules, and space for two additional control and/or retransmission modules.

For measurements in CAT-III (depends on the range selected) and for environments with degree of pollution 1 and 2 without condensation. Standard IP54 front protection, with optional upgrade to IP65 protection.

### Order Reference

Model	Power	Option1	Option2	Others
S40	A	H	---	---
	-H (85-265 Vac/dc) -L (11-60 Vdc and 24/48 Vac)	-R1 (1 relay) -AO (Analogue Output) -(empty)	-R1 (1 relay) -AO (Analogue Output) -(empty)	-65 (IP65) -(empty)

### Precautions on installation



Risk of electrical shock. Instrument terminals can be connected to dangerous voltage.



Instrument protected with double isolation. No earth connection required.



Instrument is in conformity with CE rules and regulations. See "CE Declaration of Conformity" further in this document.

This instrument has been designed and verified according to the 61010-1 CE security regulation, and is designed for applications on industrial environments. See the "CE Declaration of Conformity" further in this document for information on the category of measure and the degree of pollution levels that apply.

Installation of this instrument must be performed by qualified personnel only. This manual contains the appropriate information for the installation. Using the instrument in ways not specified by the manufacturer may lead to a reduction on the specified protection level. Disconnect the instrument from power before starting any maintenance and / or installation action.

The instrument does not have a general switch and will start operation as soon as power is connected. The instrument does not have protection fuse, the fuse must be added during installation.


The instrument is designed to be panel mounted. An appropriate ventilation of the instrument must be assured. Do not expose the instrument to excess of humidity. Maintain clean by using a humid rag and do NOT use abrasive products such as alcohols, solvents, etc.

General recommendations for electrical installations apply, and for proper functionality we recommend : if possible, install the instrument far from electrical noise or magnetic field generators such as power relays, electrical motors, speed variators, ... If possible, do not install along the same conduits power cables (power, motor controllers, electrovalves, ...) together with signal and/or control cables.

Before proceeding to the power connection, verify that the voltage level available matches the power levels indicated in the label on the instrument.


In case of fire, disconnect the instrument from the power line, fire alarm according to local rules, disconnect the air conditioning, attack fire with carbonic snow, never with water.

Front View

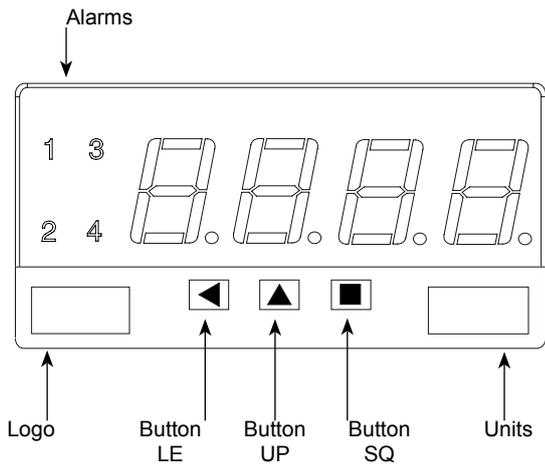

Input signal connections - AC Current


The current measuring has a single jumper position. Select the input range in the configuration menu.

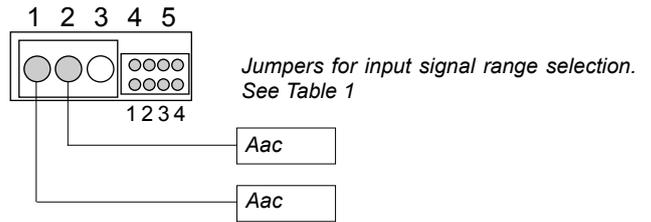

Range	Close Jumpers	
5 Aac	---	
1 Aac	---	


Table 1 - AC currents - Input signal range selection

Rear View

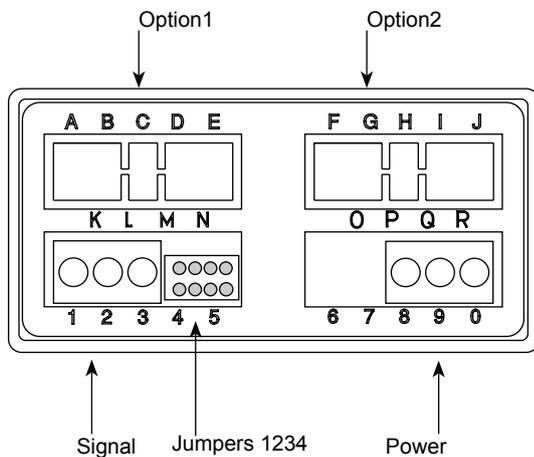

Input signal connections- AC Voltage


To configure the input signal range, select jumpers according to Table 2. Also select the range in the configuration menu.

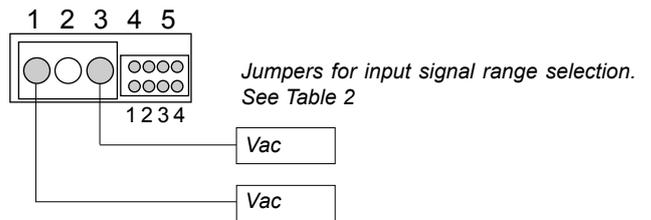

Range	Close Jumpers	
600 Vac	---	
100 Vac	4	
10 Vac	3	
1 Vac	2	
100 mVac	1	

Table 2 - AC Voltages - Input signal range selection

Power Connections

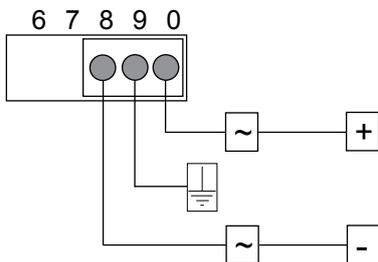

Earth connection - Although a terminal is offered for earth connection, the connection is optional. The instrument does not need this connection for correct functioning nor for compliance with the security regulations.


Fuse - To comply with security regulation 61010-1, add to the power line a protection fuse acting as disconnection element, easily accessible to the operator and identified as a protection device.

- Power "H" fuse 250mA time-lag
- Power "L" fuse 400mA time-lag

Coupling "AC Only" or "AC+DC"

To configure the coupling mode (AC or AC+DC) select the internal jumper JP3 as indicated on the Signal Board. See page 10 for information on how to open the instrument.

- AC+DC JP3 closed (by default)
- AC Only JP3 open

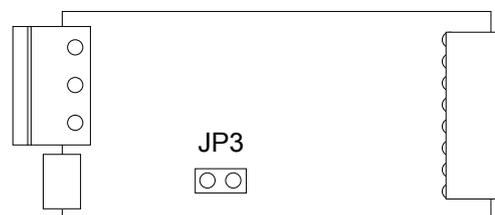

Note - The 1 Aac range is only available in AC+DC coupling

Technical Data

**Digits** 4  
 Type 7 segments, red  
 Height 14 mm  
 Display maximum 9999  
 Display minimum -1999  
 Decimal point selectable 8.8.8.8.  
 Overrange 9999 flashing  
 Underrange -1999 flashing

**Signals accepted** Vac, Aac  
 Measure Type TrueRMS  
 Coupling selectable "AC+DC" or "AC Only"  
 Ranges selectable 600Vac  
 100Vac  
 10Vac  
 1Vac  
 100mVac  
 5Aac  
 1Aac  
 Connection type Phase-Neutral or Phase-Phase  
 Oversignal +20% of the range  
 Maximum input signal see table 3  
 Minimum input signal 0.5% of range. Reading will be "0" for signals lower than this value.  
 Input impedance see table 3 (values at 50/60Hz)  
 Bandwidth (at 98.85%) 1.3 KHz for Vac ranges  
 2.0 KHz for Aac ranges  
 Minimum frequency 25Hz for ±1 count oscillation

**Accuracy at 25°C** see table 3  
 Acquisitions 15 acquisitions / second  
 Display refresh 15 display refresh / second  
 Step response time <300mSec (input 0 to 95% FS)  
 <500mSec (input 0 to 50% FS)  
 <1100mSec (input 0 to 10% FS)

*The response time for a TrueRMS measuring system is faster for high amplitude signals. Response times are given for input steps of 10%, 50% and 95% of the FS, calculated at 99% of end reading.*

Crest Factor 3 for instrument accuracy  
 5 for 2.5% accuracy

**Thermal stability**

Offset drift see table 3  
 Span drift see table 3  
 \*span drift includes also the offset drift

Technical Data (cont.)

**Power**  
 Power "H" 85 to 265 Vac/dc  
 Power "L" 11 to 60 Vdc and 24/48Vac  
 Consumption <4W  
 Isolation 3500Veff for power "H"  
 2000Veff for power "L"  
 all levels tested for 60 seconds

**Configuration** 3 frontal push buttons  
 (rear jumper for range selection)  
 (internal jumper for coupling selection)

**Functions available**

Fixed digits yes, configurable  
 Filter on display yes, recursive, configurable  
 Steps yes, configurable  
 Memory of maximum yes  
 Memory of minimum yes  
 Zeros to the left yes, configurable  
 Password yes, configurable  
 "Measure" function yes  
 Auto correction high yes  
 Auto correction low yes  
 Peak & Hold yes  
 Double setpoints yes  
 Brightness control yes, 5 levels

**Optional boards** 2 free slots

**Mechanical**

Mounting panel  
 Connections plug-in screw terminals  
 Weight <150 grams  
 Housing materials ABS, polycarbonate, vergaflex  
 Front size 72x36mm  
 Panel cut-out 69x32.5mm  
 Deep from panel 98mm (including terminal)

**Protection**


IP54 standard  
 IP65 optional (If the housing is opened, needs to be resealed)

**Temperature** Operation 0 to 50°C  
 Temperature Storage -20 to +70°C  
 Warm-up 15 minutes

Range	Accuracy	Zin	Max. Input Signal	Offset drift	Span drift
600 Vac	0.25% FS	14MΩ	1000Vac permanent	150 ppm/°C	200 ppm/°C
100 Vac	0.15% FS	2MΩ	200Vac permanent	75 ppm/°C	100 ppm/°C
10 Vac	0.15% FS	200K	200Vac permanent	75 ppm/°C	100 ppm/°C
1 Vac	0.15% FS	20K	65Vac permanent	75 ppm/°C	100 ppm/°C
100 mVac	0.20% FS	1K	4.5Vac permanent	75 ppm/°C	150 ppm/°C
5 Aac	0.20% FS	20mΩ	16Aac @5 sec.	75 ppm/°C	150 ppm/°C
1 Aac	0.20% FS	20mΩ	16Aac @5 sec.	75 ppm/°C	150 ppm/°C

Table 3 - Input signal range specifications

### Mechanical Dimensions (mm)

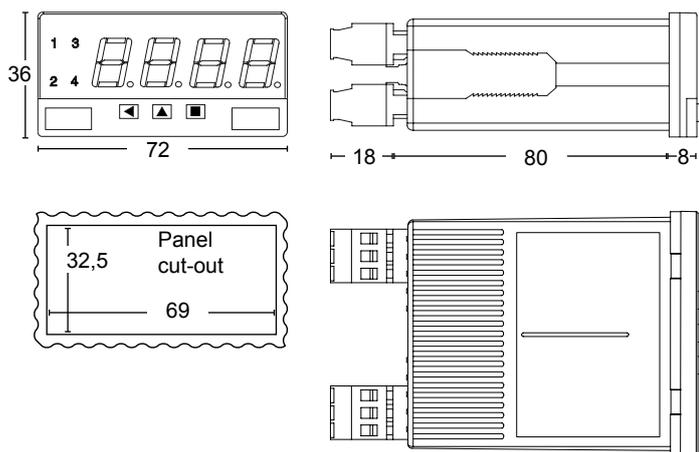

### Information Menu - Operation

To enter the "Information Menu" press the SQ button. The "Information Menu" allows to visualize information and does not allow to modify the configuration of the instrument. It is not affected by the "PASSWord" function. During operation with the "Information Menu", alarms remain "frozen" and are kept on-hold. Leaving the "Information Menu" returns to the measuring state of the instrument, without restart.

**Information Menu Tree** - See page 5.

**Rollback** - After 30 seconds without interaction from the operator, the instrument leaves the "Information Menu".

**Button SQ** - Selects the visible option.

**Button UP** - Moves vertically along the available menu options.

**Button LE** - Leaves selected menu or leaves the "Information Menu".

### Information Menu - Description

**Configuration (Conf)** - Information on the configured input signal range (600V, 5A, ...), and the values for input low "lLo", display low "dLo", input high "lHl" and display high "dHl".

**Maximum (MAX)** - Value of the maximum display.


**Minimum (Min)** - Value of the minimum display.

**AlarmX (ALX)** - Configuration of alarm X. The sequence of information shows if the alarm is being managed ("On/Off"), the alarm type ("Max/Min"), the setpoint, the hysteresis value, the activation delay and the value of setpoint2 ("Off" or the setpoint2 value).

**OptionX (OptX)** - Type of module installed. If there is no module shows "nonE".

**Measure (MEAS)**- Multimeter function. Shows the value of the input signal without scaling. This is the real value the instrument is receiving on signal terminals.

### Information Menu

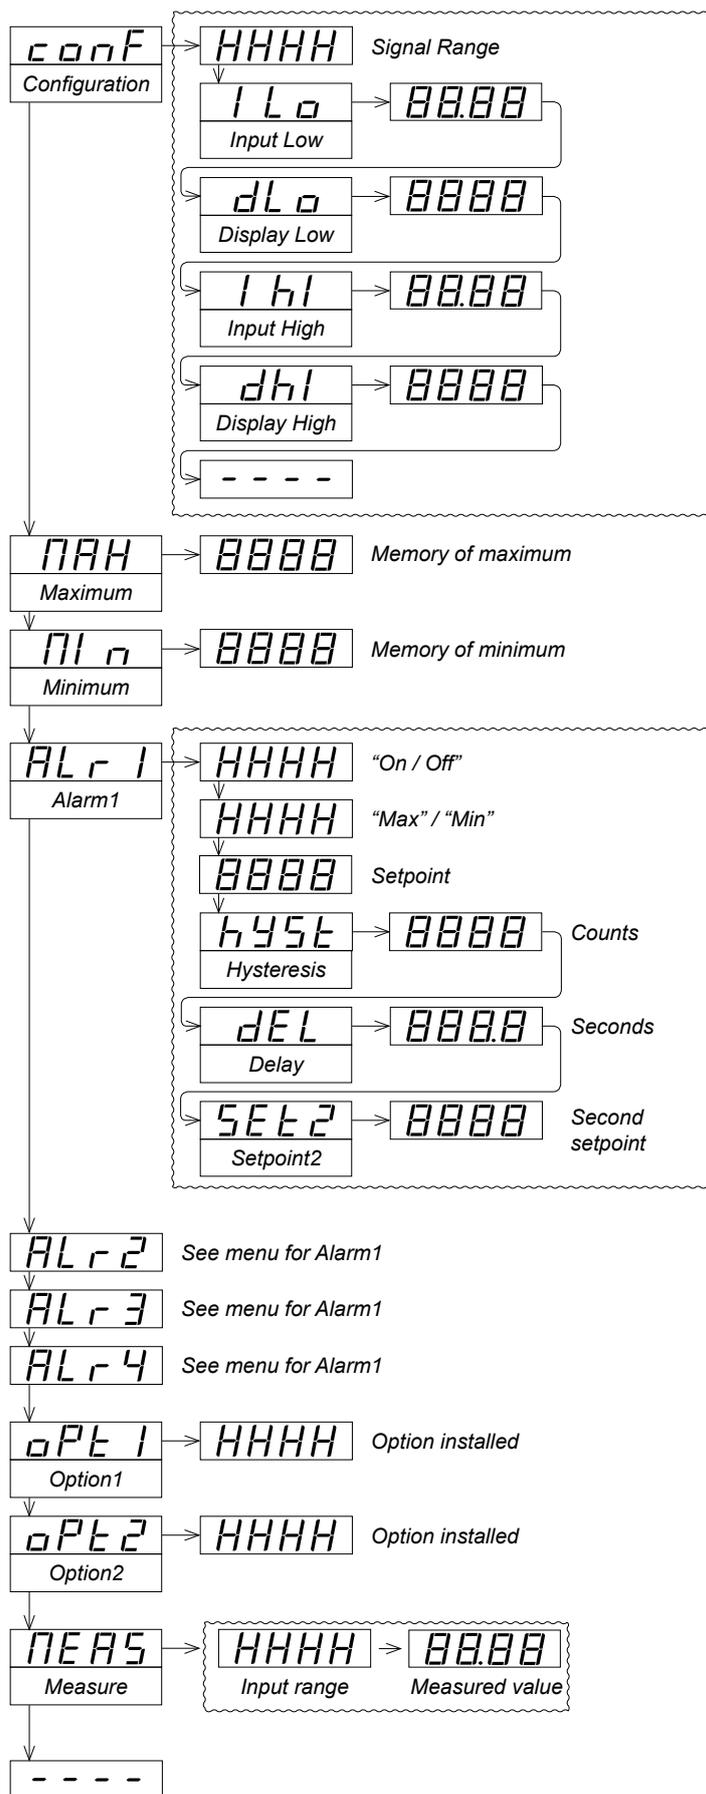

## Configuration Menu - Operation

To enter the "Configuration Menu" press the SQ button. The "Configuration Menu" allows to change the configuration of the instrument. Access to the "Configuration Menu" can be password protected with the function "PASSWord". During operation with the "Configuration Menu" the alarms remain "frozen" and are kept on-hold. When leaving the "Configuration Menu" the instrument performs a restart, and new configuration is applied. During the restart of the instrument a short alarm deactivation is performed.

**Configuration Menu Tree** - See page 6 and 7.

**Description of Configuration Menu functions** - See page 8 and 9.

**Rollback** - After 30 seconds without interaction from the operator, the instrument leaves the "Configuration Menu", discarding all changes.


**Button SQ** - Moves horizontally on the menu. Allows selection of the current option displayed. During a value selection menu (for example a setpoint value) validates the value on display.

**Button UP** - Moves vertically on the menu. Displays the available menu options. During a value selection menu (for example a setpoint value) increases digit value from 0 to 1, 2, 3, 4, 5, 6, 7, 8, 9.


**Button LE** - Leaves the current menu. Pressing LE several times will leave all menus and leave the "Configuration Menu" tree. During a value selection menu (for example a setpoint value) allows to select each digit for modification with the UP button.

**Reset** - Leaving the "Configuration Menu" forces a restart of the instrument, even in case of no changes in configuration.

## Configuration Menu

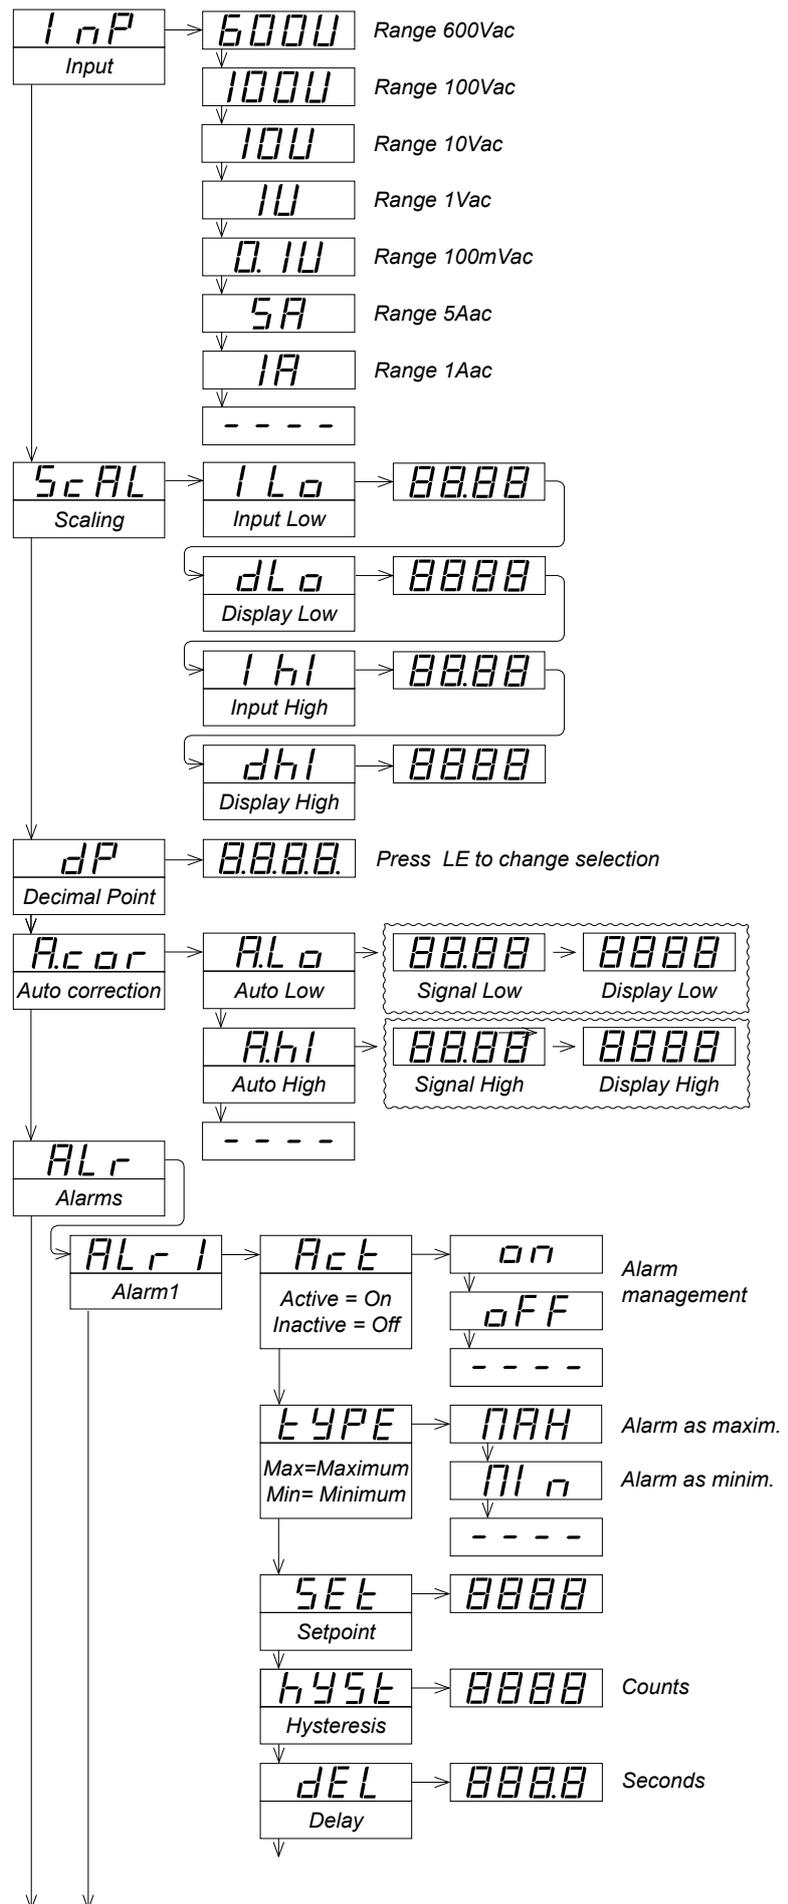

## Configuration Menu

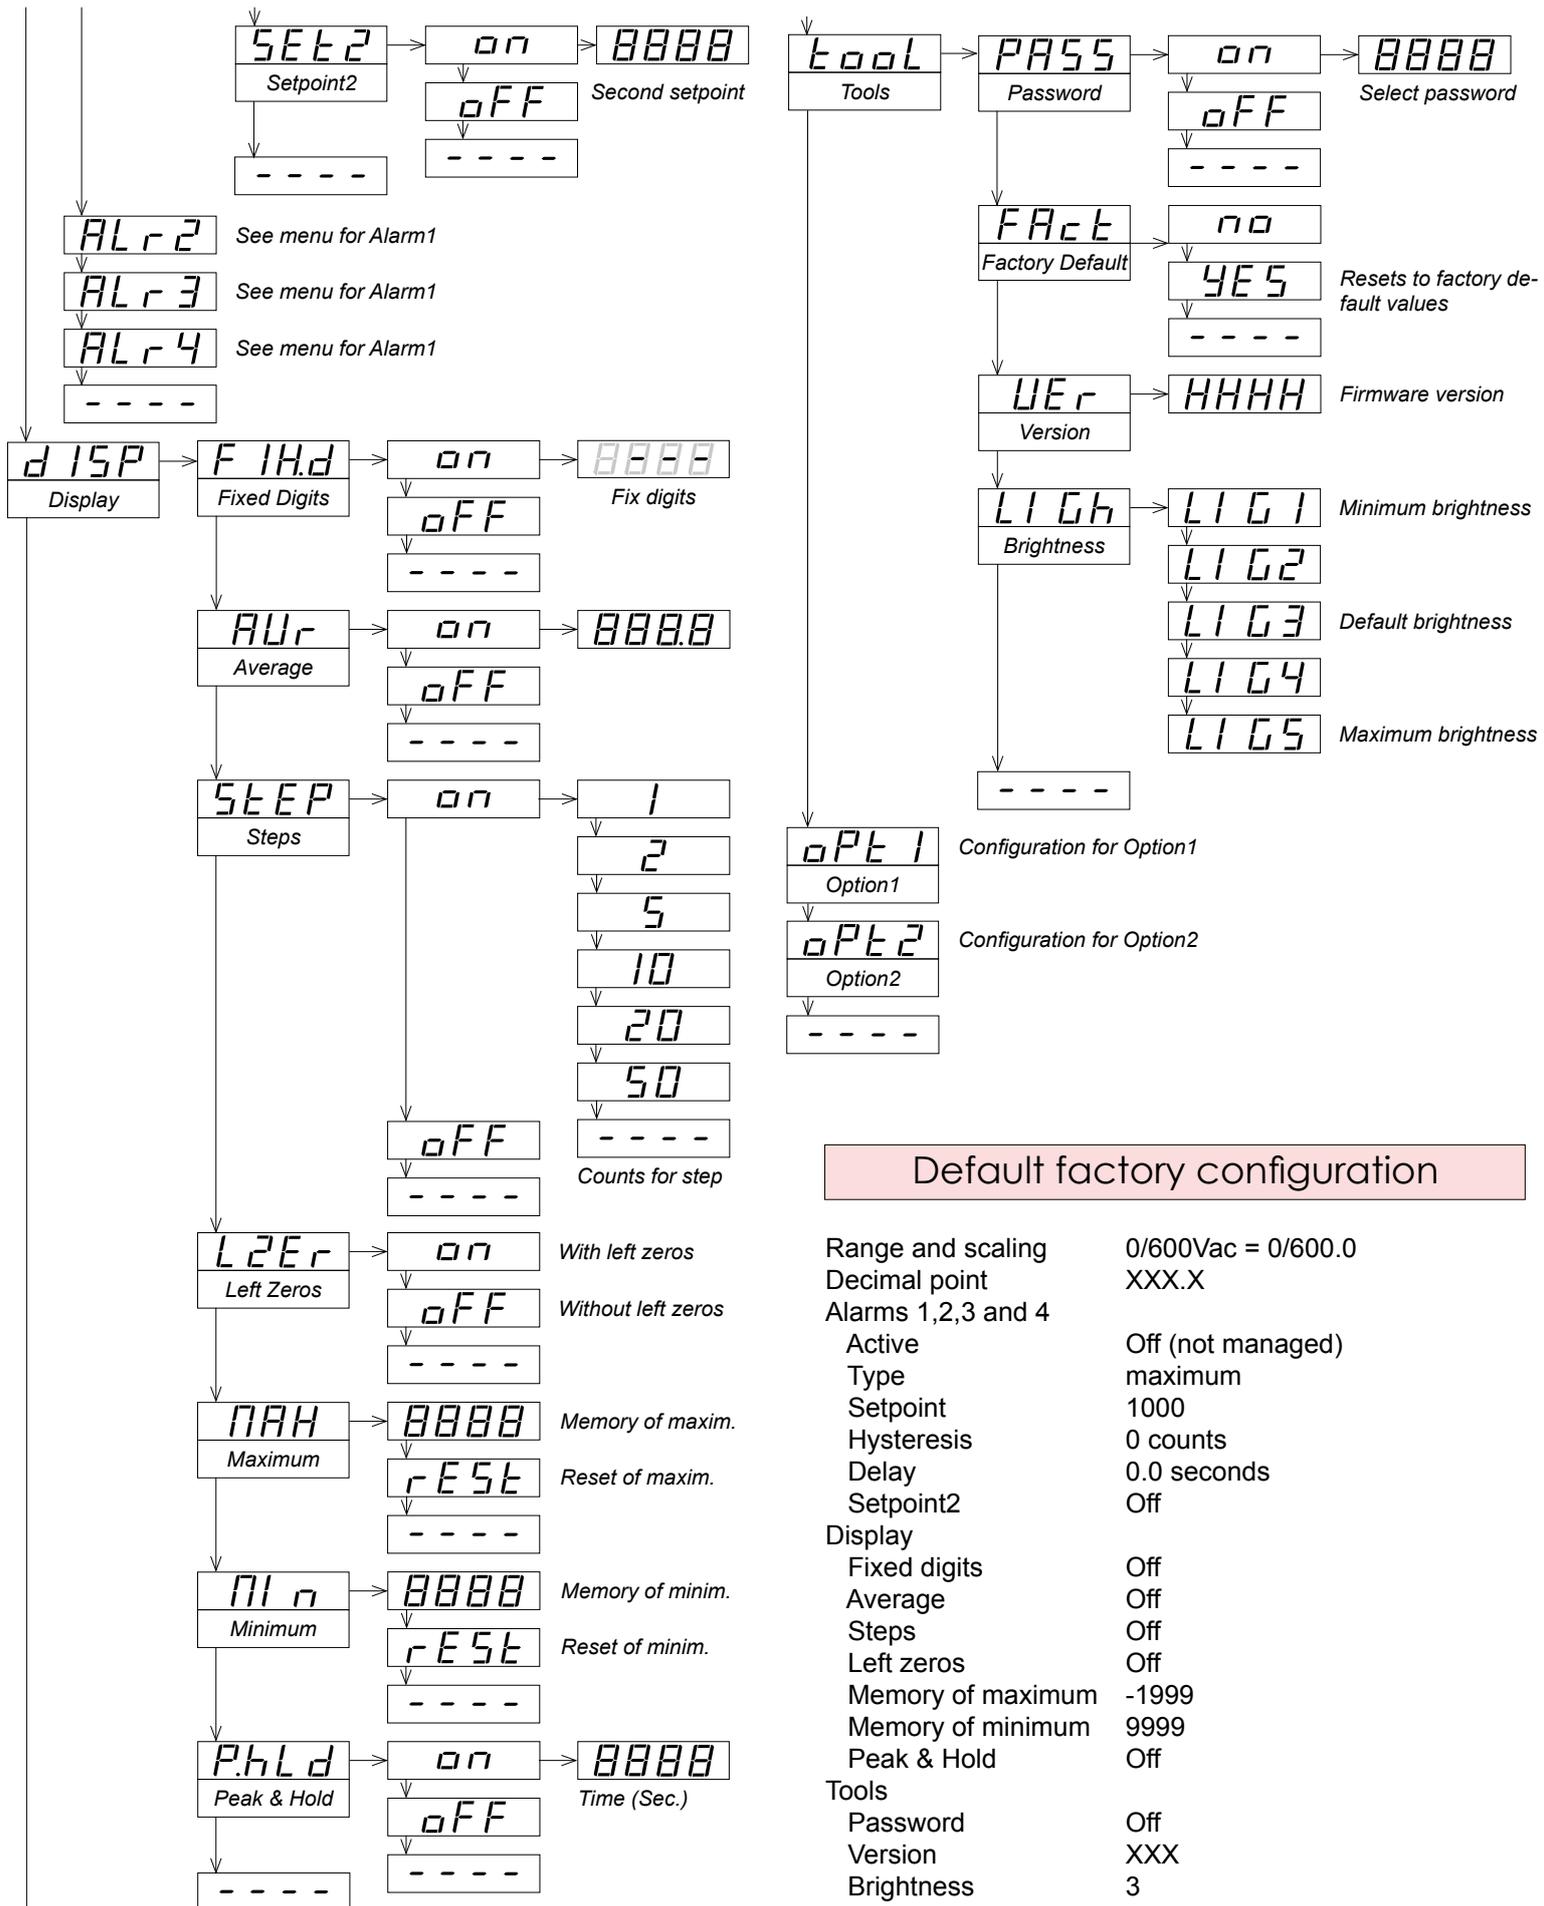

### Default factory configuration

Range and scaling	0/600Vac = 0/600.0
Decimal point	XXX.X
Alarms 1,2,3 and 4	
Active	Off (not managed)
Type	maximum
Setpoint	1000
Hysteresis	0 counts
Delay	0.0 seconds
Setpoint2	Off
Display	
Fixed digits	Off
Average	Off
Steps	Off
Left zeros	Off
Memory of maximum	-1999
Memory of minimum	9999
Peak & Hold	Off
Tools	
Password	Off
Version	XXX
Brightness	3

## Input Menu

The input menu selects the input signal range. Options available are 600Vac, 100Vac, 10Vac, 1Vac, 100mVac, 5Aac and 1Aac.

Jumpers "1234" at the rear of the instrument must be closed according to the range selected. Otherwise, the display will show erratical behavior.

## Scaling Menu

The display scaling is based on 4 parameters. These parameters define the two points of the straight line "signal / display".

Input Low ("lLo")	Signal input low
Display Low ("dLo")	Display low
Input High ("lHl")	Signal input high
Display High ("dHl")	Display high

## Decimal Point Menu

Select the position for the decimal point. Modify with the LE button and validate with the SQ button.

## Auto Correction Menu

Assigns the current input signal value to the Input Low or Input High configuration parameters. The new values for Input and Display are displayed.

**Auto Low (A.Lo)** - Select "A.Lo" to set the current input signal value to the Input Low configuration parameter.

**Auto High (A.hI)** - Select "A.hI" to set the current input signal value to the Input High configuration parameter.

## AlarmX Menu

The instrument manages up to 4 alarms. Each alarm is controlled by the condition "display higher (or lower) than the configured setpoint". The front leds are controlled by the activation / deactivation of the related alarm. The relays installed on Option1 and/or Option2 are controlled by Alarm1 and Alarm2.

**Active (Act)** - Value "On/Off". Defines if the instrument has to manage this alarm or not. Select "Off" for alarm not managed.

**Type (tyPE)** - Value "Max/Min". Defines the behavior of the alarm as maximum or minimum alarm. The alarms configured as maximum are activated when the display value is equal or higher than the setpoint. The alarms configured as maximum are deactivated when the display is lower than the setpoint. The alarms configured as minimum have the inverse behavior.

**Setpoint (SEt)** - Value from "9999" to "-1999". Alarm set point.

**Hysteresis (hySt)** - Value from "0" to "9999". Points of hysteresis. The hysteresis applies on the deactivation of the alarm.

**Delay (dEL)** - Value from "0.0" to "99.9" seconds. Delay to be applied to the relay activation and deactivation. Relays are activated and deactivated X seconds after the activation / deactivation of the alarm. The delay affects only to the relays. The delay does not affect to the front leds.

**Setpoint2 (SEt2)** - Value from "-1999" to "9999". Second setpoint. The second setpoint allows for the creation of activation windows. If the alarm is configured as maximum with setpoint 1000 and setpoint2 is configured at 1500, the alarm will be activated between 1000 and 1500 and the alarm will be deactivated when display is <1000 and >1500. Setpoint2 is affected on the same way as the setpoint with hysteresis and delays.

## Display Menu

Functions on this menu allow for configuration of the visualization.

**Fixed Digits (FIX.d)** - Allows a digit to be fixed to a predefined value (for example, least significant digit fixed to "0"). It is a condition to fix a digit that all digits to its right are also fixed. Value "-" shows that the digit is not fixed.

**Average (AVr)** - Recursive filter applied to display. Value from "0.0" to "99.9". The severity of the filter increases with the value selected. Increasing the severity of the filter makes the display response slower.

**Steps (StEP)** - Display changes on predefined steps. Values are 1, 2, 5, 10, 20 and 50. The display is made in steps of X counts. For example, select a step of 20 will make the display to change in steps of 20 (1420, 1440, 1460, ...).

**Left Zero (LZEr)** - Value "On/Off". Select "On" to visualize zeros to the left.

**Maximum (MAX)** - Memory of maximum display. Indicates the maximum value of display since the last reset of the memory. Memory is reset on the following cases : manual reset from the Configuration Menu (Maximum), change on the input signal (Input), modification on the scaling (Scaling), change on the decimal point (dP), modification of the linearization segments, or instrument power-down.

**Minimum (MIn)** - Memory of minimum display. Indicates the minimum value of display since the last reset of the memory. Memory is reset on the following cases : manual reset from the Configuration Menu (minimum), change on the input signal (Input), modification on the scaling (Scaling), change on the decimal point (dP), modification of the linearization segments, or instrument power-down.

**Peak & Hold (P.hLd)** - Peak & Hold function detects sharp drops in the displayed value, and holds the display if a display drop is detected. To disable the hold function for a moment, press any of the front buttons or wait for a predefined time :

Time 0	hold disabled (Off)
Time 1 a 3999	seconds, before disabling the hold
Time 4000	infinite hold

The counting of seconds is started each time there is an increase in the display value. Alarms will follow the input signal while hold is active.

## Tools Menu

**Password (Pass)** - Select a number to act as password. This password will be requested when entering the Configuration Menu. To deactivate the password select "Off".

**Factory Settings (Fact)** - Factory default configuration. Select "yES" to activate the factory default configuration.

**Version (Ver)** - Firmware version installed.

**Light (Ligh)** - Luminosity. Select between 5 predefined levels of luminosity.

## Options Menu

Menu options OPT1 and OPT2 give access to the configuration menus of the installed options. The menu depends on the installed option. If there is no option installed the instrument shows "nonE".

## Messages and errors

When the instrument detects that the displayed value does not correspond to the input value, the display will flash and alternate with a message.

**"h.ldr"** Hardware underrange. The instrument is reading the lowest possible signal, and can not follow lower signals.

**"h.ovr"** Hardware overrange. The instrument is reading the highest possible signal and can not follow higher signals.

**"d.ldr"** Display underrange. The instrument is displaying the minimum value (-1999) and can not display below.

**"d.ovr"** Display overrange. The instrument is displaying the maximum value (9999) and can not display above.

**"hoLd"** The instrument is showing the value present when the hold function was activated. Hold function is active.

**"Min"** The instrument displays the minimum displayed value in memory. The minimum visualization is active.

**"MAX"** The instrument displays the maximum displayed value in memory. The maximum visualization is active.

**"P.hLd"** The instrument displays the peak value. Function Peak&Hold is active.

**Err.0** Values introduced on the "ScAL" menu are not valid. Default values are activated. The slope defined by the two points is almost vertical (higher than 5000):


**Err.1** Password incorrect.

**Err.2** The instrument has detected an installed option but was unable to communicate.


### Option R1 - 1 relay

Relay type	3 contacts (Com, NC, NO)
Maximum current	8A (resistive load)
Voltage	250 Vac continuously
Instalable in	Option1 and/or Option2

Connections for Option1

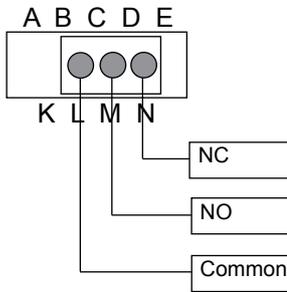

Connections for Option2

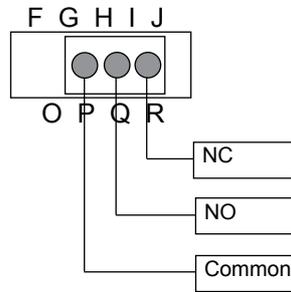


### Accessing the instrument

You may need to access the inside of the instrument to insert additional options. Use a flat screwdriver to unlock the upper clips marked with "A". Then unlock the lower clips marked with "B" and move out the front filter. Let the inside of the instrument slide out of the housing.

To reinsert the instrument make sure that all modules are correctly connected to the pins on the display module. Place all the set into the housing, assuring that the modules correctly fit into the internal guiding slides of the housing. Once introduced, place again the front filter by clipping first the upper clips "A" and then the lower clips "B".

Important - If your instrument was delivered with the IP65 front seal option, accessing the inside of the instrument will permanently break the IP65 seal on the areas of clips "A" and "B".

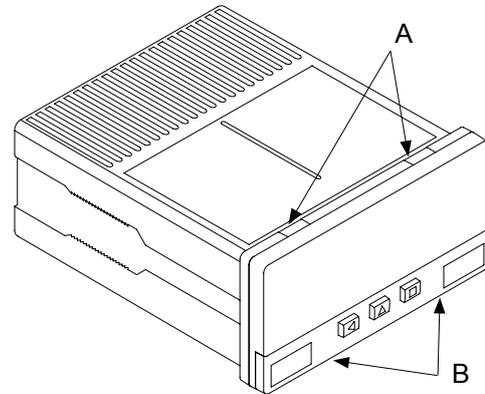

### Warranty

All instruments are warranted against all manufacturing defects for a period of 24 MONTHS from the shipment date. This warranty does not apply in case of misuse, accident or manipulation by non-authorized personnel. In case of malfunction get in contact with your local provider to arrange for repair. Within the warranty period and after examination by the manufacturer, the unit will be repaired or substituted when found to be defective. The scope of this warranty is limited to the repair cost of the instrument, not being the manufacturer eligible for responsibility on additional damages or costs. .

### CE Declaration of Conformity

Manufacturer FEMA ELECTRÓNICA, S.A.  
 Altimira 14 - Pol. Ind. Santiga  
 E08210 - Barberà del Vallès  
 BARCELONA - SPAIN  
 www.fema.es - info@fema.es

Products - S40-A

The manufacturer declares that the instruments indicated comply with the directives and rules indicated below.

Directive of electromagnetic compatibility 2004/108/CEE  
 Directive of low voltage 73/23/CEE

**Security rules 61010-1**

Equipment "Fixed"  
 "Permanently connected"  
 Pollution degree 1 and 2 (without condensation)  
 Isolation Double  
 Category CAT-III up to 300Vac  
 CAT-II up to 600Vac

**Emission rules**

61000-6-4 Generic rules of emission

**Immunity rules**

- 61000-6-2 Generic rules of immunity
- 61000-4-2 By contact ±4KV - Criteria B  
 On air ±8KV - Criteria B
- 61000-4-3 Criteria A
- 61000-4-4 On AC power lines: ±2KV - Criteria B  
 On DC power lines: ±2KV - Criteria B  
 On signal lines : ±1KV - Criteria B
- 61000-4-5 Between AC power lines ±1KV - Criteria B  
 Between DC power lines ±0.5KV - Criteria B
- 61000-4-6 Criteria A
- 61000-4-8 30A/m at 50Hz - Criteria A
- 61000-4-11 0% 1 cycle Criteria A  
 40% 10 cycle Criteria B  
 70% 25 cycle Criteria B  
 0% 250 cycle Criteria B

Barberà del Vallès February 2011  
 Daniel Juncà - Quality Manager

THIS PAGE BLANK

# other products



Panel Meters  
Standard 96x48mm



Panel Meters  
Small 72x36mm



Panel Meters  
Miniature 48x24mm



Large Displays  
60&100mm digit



Signal Converters  
& Isolators



Panel Meters  
Standard 96x48mm

[www.fema.es](http://www.fema.es)

ELECTRONIC INSTRUMENTATION FOR INDUSTRY

FEMA ELECTRÓNICA, S.A.  
Altimira 14 - Pol. Ind. Santiga  
E08210 Barberà del Vallès  
BARCELONA - SPAIN

Tel. (+34) 93.729.6004 - [www.fema.es](http://www.fema.es)  
Fax (+34) 93.729.6003 - [info@fema.es](mailto:info@fema.es)